

ACORNSOFT



**A word processor for the
BBC Microcomputer**

Reference Card

SHIFT with arrow keys

Horizontally	Moves the cursor to the beginning of the next or previous word or the end of a line if it comes first.
Vertically	Moves the cursor a screen depth.

CTRL with arrow keys

Horizontally	Moves the cursor to the beginning or end of the line.
Vertically	Moves the cursor to the beginning or end of the text.

COPY Copies a marked block of text at the cursor position.

SHIFT COPY Inserts the current ruler on a new line at the cursor position.

DELETE Deletes the character to the left of the cursor. In insert mode, the text is closed up.

ESCAPE Switches between the text screen and the command screen.

Extended highlights

To use these, you should have the stored command HT 2 130 in the text, which switches the highlight 2 code sent by VIEW to the printer driver from 129 to 130. The effects available will be as follows.

-	Switch underlining on or off. Automatically cancelled at end of line.
***	Switch bold on or off.
*	Next character is part of extended character set.
*-	Begin subscripting. Automatically cancelled at end of line.
**	Begin superscripting. Automatically cancelled at end of line.
**-	Return to normal printing after superscripting or subscripting.
*--	Switch alternative font on or off.
-	Switch italics on or off.
*---	Reset all functions to off. Use at the start of all documents.
--	Used by ViewIndex only.

Additional notes

All filing system commands such as *COPY and operating system commands such as *TV and *FX can be used from the command screen. See the relevant user guides for further details.

1 and 0 are synonyms for ON and OFF in the command screen and in stored commands.